


## LED Strobe Wash Outdoor Moving Light

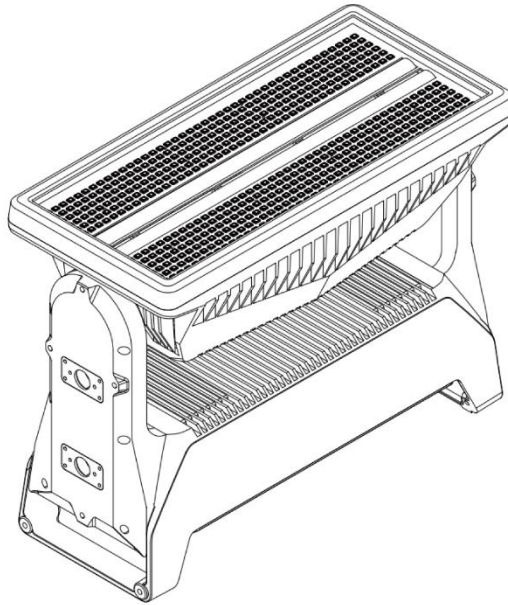

This product manual contains important information about the safe installation and use of this projector. Please read and follow these instructions carefully and keep this manual in a safe place for future reference.

**User manual** Version: V1.0

Please read the instructions carefully before use


# TABLE OF CONTENTS

- 1. Dimension..... 3
- 2. Safety Information ..... 3
- 3. Preparing for installation ..... 5
- 4. Parts identification and terminology ..... 6
- 5. Installation ..... 7
- 6. Connecting AC Power ..... 8
- 7. Configuring the fixture ..... 9
- 8. Connecting to a DMX control device..... 10
- 9. Configuring the fixture for DMX control ..... 11
- 10. Cleaning ..... 12
- 11. DMX Protocols..... 12
- 12. Control Menu ..... 22
- 13. Specification..... 24

## STATEMENT

The product has well capability and intact packing when leave factory. All of the user should comply with warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

# 1. Dimension

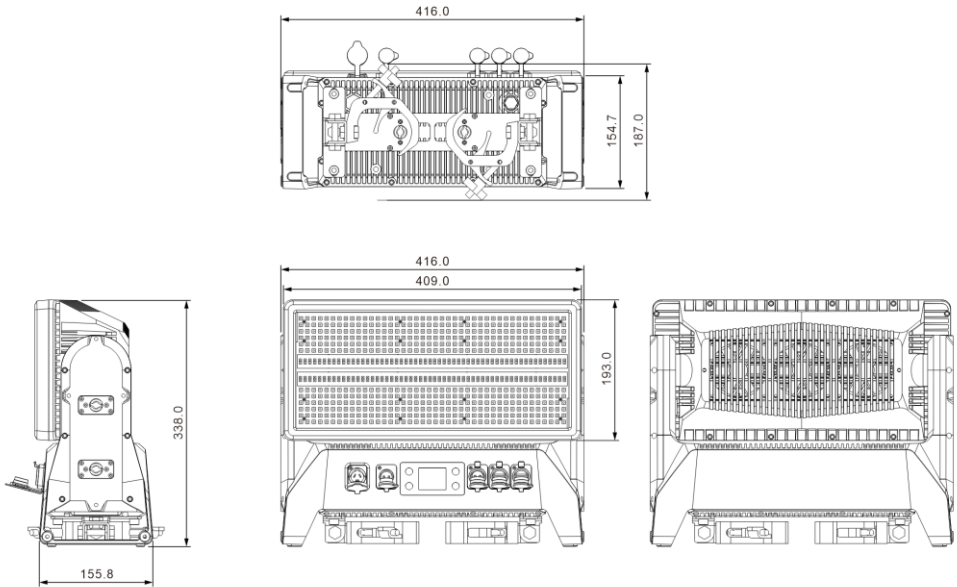

# 2. Safety Information



**WARNING!** Read the safety precautions in this section before unpacking, installing, powering or operating this product.

This luminaires are multi-environmental fixtures with an IP-rating of 65, intended for professional use only. They are not suitable for household use.

Review the following safety precautions carefully before installing or operating the fixture. This fixture must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the fixture and the hazards involved.

## Preventing electric shock



**WARNING!** Risk of electric shock.

- Always power off/unplug the fixture before removing any covers.
- Ensure that the power is turned off when connecting the fixture to the AC mains supply.
- Ensure that the fixture is electrically connected to earth (ground).
- Do not apply power if the fixture is in any way damaged.
- Do not immerse the fixture in water or liquid.

## Preventing burns and fire



**WARNING!** Take measures to prevent burns and fire.

- Install in a location that prevents accidental contact with the fixture.
- Install only in a well-ventilated space.
- Install at least 0.3 m (12 in.) away from objects to be illuminated.
- Install only in accordance with applicable building codes.
- Ensure a minimum clearance of 0.1 m (4 in.) around the cooling fans.
- Do not paint, cover or modify the fixture.
- Keep all flammable materials away from the fixture.
- Allow the fixture to cool for 15 minutes after operation, before touching it.
- CAUTION: Exterior surface temperature after 5 min. operation = 45 °C (113 °F). Steady state = 60 °C (140 °F).

## Avoid personal injury



**WARNING!** Take measure to prevent personal injury.

- Do not look directly at the light source from close range.
- Take precautions to prevent injury due to falls when working at height.
- For permanent installation, ensure that the fixture is securely fastened to a load-bearing surface with suitable corrosion-resistant hardware.
- For temporary installation with clamps, ensure that the quarter-turn fasteners are turned fully and secured with a suitable safety cable. The cable must be approved for a safe working load (SWL) of 10 times the weight of the fixture, and it must have a minimum gauge of 3 mm.

### 3. Preparing for installation

Unpack the fixture and inspect it to ensure that it has not been damaged during transport.

The fixture is shipped with two quarter-turn brackets, that can be used to mount the fixture at elevation.


The fixture is IP65-rated, and is designed for use in wet locations. This means that it is protected from:

- Dust, to the degree that dust cannot enter the fixture in sufficient quantities as to interfere with its operation.
- Lower pressure jets of water from any direction.


When selecting a location for the fixture, ensure that:

- It is situated away from public thoroughfares and protected from contact with people.
- It is not immersed in water or exposed to high-pressure water jets.
- It has adequate ventilation.

# 4. Parts identification and terminology

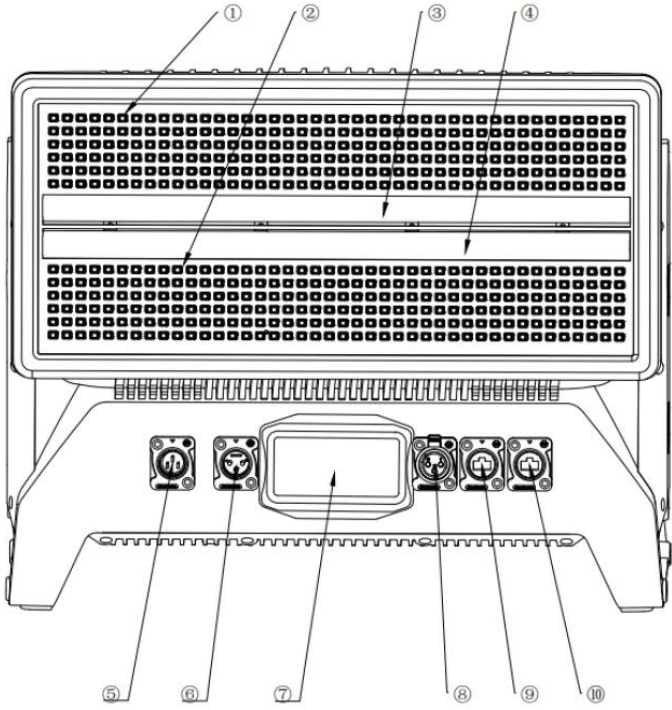


- ① RGB Plate 1
- ② RGB Plate 2
- ③ Beam 1
- ④ Beam 2
- ⑤ SEETRONIC True1 Power In
- ⑥ SEETRONIC DMX In
- ⑦ LCD Touch Screen
- ⑧ SEETRONIC DMX Out
- ⑨ Art-Net RJ45 A
- ⑩ Art-Net RJ45 B

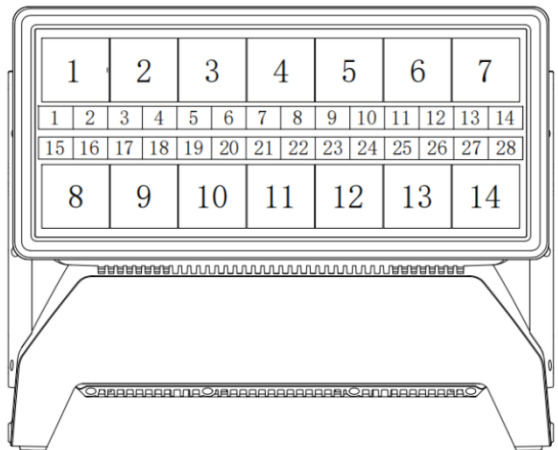


## 5. Installation

The fixture may be installed in any orientation, but if installed horizontally with a downward beam-angle, water can potentially pool in the fan wells. Under normal operation the moisture will evaporate. However, in locations with high rainfall, you may wish to fabricate a rain shield above the fixture, or modify the position and orientation of the fixture to minimize pooling.

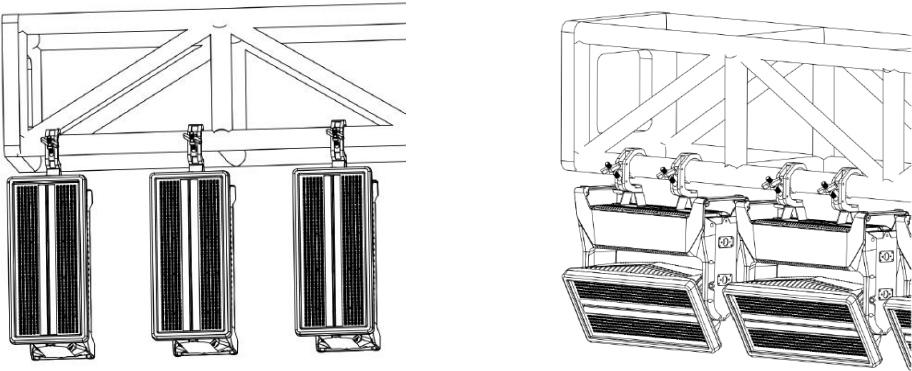

Two quarter-turn brackets are supplied with the fixture if it is to be flown above the ground. Rig the fixture to a support truss or structure using the supplied brackets and suitable clamps.

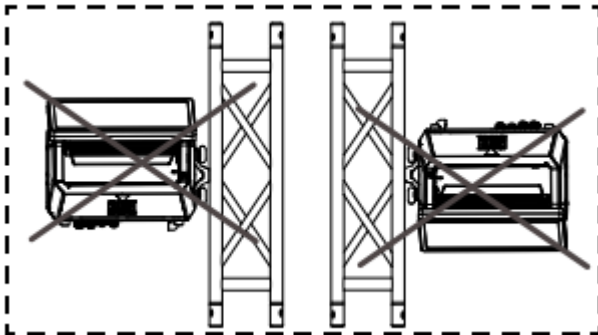

Fasten a safety cable (not shown) between the support structure and the attachment point on the fixture. The safety cable must be able to bear at least 10 times the weight of the fixture.

## 6. Connecting AC Power

The fixture can operate on any 100–240 V, 50/60 Hz AC mains power supply. It draws approximately 2 amps at full power. For permanent installation, have a qualified electrician wire the mains cable directly to a suitable branch circuit.

The junction's ingress protection (IP) rating must be suitable for the location. For temporary installation, the mains cable may be fitted with a grounded connector intended for exterior use.

When installing standard type C circuit breakers there will be no limitations due to the fixture in-rush current. Due to the nominal current of the fixture, ensure that no more than:

4 fixtures are connected through the same type C, 10A circuit breaker.

7 fixtures are connected through the same type C, 16A circuit breaker.

The fixture must be grounded/earthed and be able to be isolated from AC power. The AC power supply must incorporate a fuse or circuit breaker for fault protection.

After connecting the fixture to power, run the on-board test, using the "Fixture Text" menu, to ensure that the fixture and each LED are functioning correctly. See "Control menu" on page 13.

**CAUTION:** Do not open the fixture to replace the supplied power cable, or connect the fixture to an electrical dimmer system, as this can damage it.



## 7. Configuring the fixture

Set up the fixture using the control panel and LCD display at the arm side of the fixture.

Navigate the menus and options using the arrow buttons and select items using the Enter button. The options available are listed in "Control menu" on page 13. After powering on, the display shows the currently selected operating mode and other information.

The fixture is set by default to be controlled in DMX mode.

### **Master/Slave configuration**

You can set a fixture to operate as master fixture to another fixture (which then becomes a slave fixture), or an entire group of fixtures (which then becomes slave fixtures). The assigned slave fixture(s) will mimic the settings of the master fixture. Use the "Auto Program -> Auto Color / Auto Fade" menu to set your fixture as master fixture, then other fixtures set to DMX mode as slave fixture.

### **Setting a static color manually**

The fixture can be configured to display a predefined and static color using the "Manual Color" (see "Control menu" on page 13).

It may suit your needs when you without a DMX controller to do the color mixing.

### **Using stand-alone operation**

Stand-alone operation is where the fixture is not connected to a control device, but is preprogrammed with 2 modes (Auto Color, Auto Fade), that play continuously in a loop, the run speed of "Auto Color", "Auto Fade" are adjustable.


To define a stand-alone program, use the "Auto Program" menus (see "Control menu" on page 13).

## 8. Connecting to a DMX control device

The fixture is controllable using a DMX control device and it can be connected using a DMX cable.

If using a cabled DMX system, connect the DMX in cable (with male 3-pin XLR plug) and out cable (with female 3-pin XLR plug) to the DMX data link. Terminate the DMX out cable of the last fixture in the data link. For outdoor installations, use only IP-rated XLR connectors suitable for outdoor use.

The DMX512 is widely used in intelligent lighting control, with a DMX 512 controller. connect several lights together, DMX in and DMX out, 3 pin XLR connectors: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

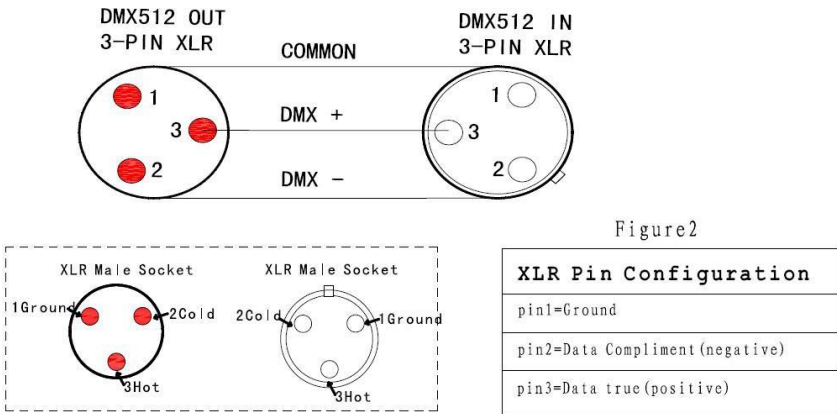

## 9. Configuring the fixture for DMX control

### About DMX

The fixture can be controlled using signals sent by a DMX controller on a number of channels (which varies depending on the DMX mode that has been set).

The first channel used to receive data from a DMX control device is known as the DMX start address. Each fixture must have a DMX start address set. For example, if a fixture has a DMX address of 10 and it is in 4-channel DMX mode, then it uses channels 10, 11, 12 and 13. The following fixture in the DMX chain could then be set to a DMX address of 14. If two or more DMX fixtures of the same type have the same DMX address, then they will mimic each other's behaviour. Incorrect settings will result in unpredictable responses to the lighting controller.

### Setting the DMX address

The DMX address can be seen on the main screen. To change the address setting, press the up arrow to increase the address, or the down arrow to decrease the setting. When the desired address is displayed, press Enter to save the setting.

Note that channel spacing is determined by the DMX mode.

See the "DMX protocols" on page 11 for specific DMX control values.

### Setting the DMX mode

Using the "DMX Channel Mode" menu available from the control panel, specify the DMX mode that provides the fixture controls that you require, confirm chosen mode by pressing 'Enter'.

## 10. Cleaning

To maintain optimal performance, regular cleaning is essential. Cleaning schedules will vary depending on the operating environment, and the installation should therefore be checked at frequent intervals within the first few weeks of operation to see whether cleaning is necessary. This procedure will allow you to assess cleaning requirements in your particular situation. Clean the fixture using a soft cloth dampened with a solution of water and a mild detergent. Do not use products that contain solvents, abrasives or caustic agents for cleaning, as they can cause damage to both hardware, cables and connectors.

## 11. DMX protocols

Configuring DMX is described "Setting the DMX mode" on page 10.

### 8 Channel mode

<b>Channel</b>	<b>Name</b>	<b>DMX Value</b>	<b>Description</b>
1	Tilt	0-255	Tilt Movement
2	Dimmer	0-255	Main Dimmer
3	Beam White	0-255	Beam White Dimmer
4	Plate Red	0-255	Plate Red Dimmer
5	Plate Green	0-255	Plate Green Dimmer
6	Plate Blue	0-255	Plate Blue Dimmer
7	Beam Strobe	0-255	Strobe from slow to fast
8	Plate Strobe	0-255	Strobe from slow to fast

## 18 Channel mode

Channel	Name	DMX Value	Description
1	Tilt	0-255	Tilt Movement
2	Dimmer	0-255	Main Dimmer
3	Beam Dimmer	0-255	Beam White Dimmer
4	Beam Strobe Mode	0-10	Open
		11-36	Closed
		37-40	Ramp Up
		41-44	Ramp Up, Random
		45-48	Ramp Down
		49-52	Ramp Down, Random
		53-56	Ramp Up And Down
		57-60	Ramp Up And Down, Random
		61-64	Random
		65-68	Random Single Pixel
		69-72	Random Times
		73-76	Strobe
252-255	Open		
5	Beam Strobe Rate	0-255	Speed From Slow To Fast
6	Beam Macro	0-255	Beam Macro
7	Beam Macro Speed	0-255	Speed From Slow To Fast
8	Plate Dimmer	0-255	Plate RGB Dimmer
9	Plate Red	0-255	Plate Red Dimmer
10	Plate Green	0-255	Plate Green Dimmer
11	Plate Blue	0-255	Plate Blue Dimmer
12	Plate Strobe Mode	0-10	Open
		11-36	Closed
		37-40	Ramp Up
		41-44	Ramp Up, Random
		45-48	Ramp Down

		49-52	Ramp Down, Random
		53-56	Ramp Up And Down
		57-60	Ramp Up And Down, Random
		61-64	Random
		65-68	Random Single Pixel
		69-72	Random Times
		73-76	Strobe
		252-255	Open
13	Plate Strobe Rate	0-255	Speed From Slow To Fast
14	Plate Macro	0-255	RGB Plate Macro
15	Plate Macro Speed	0-255	Speed From Slow To Fast
16	Plate Macro Colors	0-10	Closed
		11-250	Presets Colors
		251-255	Full RGB
17	Plate Macro Duration	0-255	Duration
18	Control	0-5	No Function
		6-10	Dimmer Speed 0
		11-15	Dimmer Speed 1
		16-20	Dimmer Speed 2
		21-25	Dimmer Speed 3
		26-30	600 Hz
		31-35	1200 Hz
		36-40	2000 Hz
		41-45	4000 Hz
		46-50	6000 Hz
		51-55	25 KHz
		56-60	Fan Mode Auto
		61-65	Fan Mode High
		66-70	Tilt Reset
71-75	Plate 1 Invert Off		

		76-80	Plate 1 Invert On
		81-85	Plate 2 Invert Off
		86-90	Plate 2 Invert On
		91-95	Beam 1 Invert Off
		96-100	Beam 1 Invert On
		101-105	Beam 2 Invert Off
		106-110	Beam 2 Invert On
		111-115	Plate Swap On
		116-120	Plate Swap Off
		121-125	Beam Swap On
		126-130	Beam Swap Off
		131-140	Screen Always On
		141-150	Screen Off After 10s
		151-155	Screen Off After 60s
		156-160	Factory Data Reset
		161-170	W-DMX On
		171-175	W-DMX Off
		176-255	No Function

## 25 Channel mode

Channel	Name	DMX Value	Description
1	Tilt	0-255	Tilt Movement
2	Dimmer	0-255	Main Dimmer
3	Beam Dimmer	0-255	Beam White Dimmer
4	Beam Strobe Mode	0-10	Open
		11-36	Closed
		37-40	Ramp Up
		41-44	Ramp Up, Random
		45-48	Ramp Down
		49-52	Ramp Down, Random

		53-56	Ramp Up And Down
		57-60	Ramp Up And Down, Random
		61-64	Random
		65-68	Random Single Pixel
		69-72	Random Times
		73-76	Strobe
		252-255	Open
5	Beam Strobe Rate	0-255	Speed From Slow To Fast
6	Beam Strobe Duration	0-255	Beam Strobe Duration
7	Beam Macro	0-255	Beam Macro
8	Beam Macro Speed	0-255	Speed From Slow To Fast
9	Beam Macro Duration	0-255	Beam Macro Duration
10	Plate Dimmer	0-255	Plate RGB Dimmer
11	Plate Red	0-255	Plate Red Dimmer
12	Plate Green	0-255	Plate Green Dimmer
13	Plate Blue	0-255	Plate Blue Dimmer
14	Plate Strobe Mode	0-10	Open
		11-36	Closed
		37-40	Ramp Up
		41-44	Ramp Up, Random
		45-48	Ramp Down
		49-52	Ramp Down, Random
		53-56	Ramp Up And Down
		57-60	Ramp Up And Down, Random
		61-64	Random
		65-68	Random Single Pixel
		69-72	Random Times
		73-76	Strobe
		252-255	Open
15	Plate Strobe	0-255	Speed From Slow To Fast



	Rate		
16	Plate Strobe Duration	0-255	Plate Strobe Duration
17	Plate Macro	0-255	RGB Plate Macro
18	Plate Macro Speed	0-255	Speed From Slow To Fast
19	Plate Macro Colors	0-10	Closed
		11-250	Presets Colors
		251-255	Full RGB
20	Plate Macro Duration	0-255	Duration
21	Plate Background Dimmer	0-255	Macro Background Color Dimmer
22	Background Red	0-255	Macro Background Red Dimmer
23	Background Green	0-255	Macro Background Green Dimmer
24	Background Blue	0-255	Macro Background Blue Dimmer
25	Control	0-5	No Function
		6-10	Dimmer Speed 0
		11-15	Dimmer Speed 1
		16-20	Dimmer Speed 2
		21-25	Dimmer Speed 3
		26-30	600 Hz
		31-35	1200 Hz
		36-40	2000 Hz
		41-45	4000 Hz
		46-50	6000 Hz
		51-55	25 KHz
		56-60	Fan Mode Auto
		61-65	Fan Mode High
66-70	Tilt Reset		

		71-75	Plate 1 Invert Off
		76-80	Plate 1 Invert On
		81-85	Plate 2 Invert Off
		86-90	Plate 2 Invert On
		91-95	Beam 1 Invert Off
		96-100	Beam 1 Invert On
		101-105	Beam 2 Invert Off
		106-110	Beam 2 Invert On
		111-115	Plate Swap On
		116-120	Plate Swap Off
		121-125	Beam Swap On
		126-130	Beam Swap Off
		131-140	Screen Always On
		141-150	Screen Off After 10s
		151-155	Screen Off After 60s
		156-160	Factory Data Reset
		161-170	W-DMX On
		171-175	W-DMX Off
		176-255	No Function

## 95 Channel mode

Channel	Name	DMX Value	Description
1	Tilt	0-255	Tilt Movement
2	Dimmer	0-255	Main Dimmer
3	Beam Dimmer	0-255	Beam White Dimmer
4	Beam Strobe Mode	0-10	Open
		11-36	Closed
		37-40	Ramp Up
		41-44	Ramp Up, Random
		45-48	Ramp Down


		49-52	Ramp Down, Random
		53-56	Ramp Up And Down
		57-60	Ramp Up And Down, Random
		61-64	Random
		65-68	Random Single Pixel
		69-72	Random Times
		73-76	Strobe
		252-255	Open
5	Beam Strobe Rate	0-255	Speed From Slow To Fast
6	Beam Strobe Duration	0-255	Beam Strobe Duration
7	Beam Macro	0-255	Beam Macro
8	Beam Macro Speed	0-255	Speed From Slow To Fast
9	Beam Macro Duration	0-255	Beam Macro Duration
10	Plate Dimmer	0-255	Plate RGB Dimmer
11	Plate Red	0-255	Plate Red Dimmer
12	Plate Green	0-255	Plate Green Dimmer
13	Plate Blue	0-255	Plate Blue Dimmer
14	Plate Strobe Mode	0-10	Open
		11-36	Closed
		37-40	Ramp Up
		41-44	Ramp Up, Random
		45-48	Ramp Down
		49-52	Ramp Down, Random
		53-56	Ramp Up And Down
		57-60	Ramp Up And Down, Random
		61-64	Random
		65-68	Random Single Pixel
		69-72	Random Times
		73-76	Strobe
		252-255	Open

15	Plate Strobe Rate	0-255	Speed From Slow To Fast
16	Plate Strobe Duration	0-255	Plate Strobe Duration
17	Plate Macro	0-255	RGB Plate Macro
18	Plate Macro Speed	0-255	Speed From Slow To Fast
19	Plate Macro Colors	0-10	Closed
		11-250	Presets Colors
		251-255	Full RGB
20	Plate Macro Duration	0-255	Duration
21	Plate Background Dimmer	0-255	Macro Background Color Dimmer
22	Background Red	0-255	Macro Background Red Dimmer
23	Background Green	0-255	Macro Background Green Dimmer
24	Background Blue	0-255	Macro Background Blue Dimmer
25	Control	0-5	No Function
		6-10	Dimmer Speed 0
		11-15	Dimmer Speed 1
		16-20	Dimmer Speed 2
		21-25	Dimmer Speed 3
		26-30	600 Hz
		31-35	1200 Hz
		36-40	2000 Hz
		41-45	4000 Hz
		46-50	6000 Hz
		51-55	25K Hz
		56-60	Fan Mode Auto
		61-65	Fan Mode High
66-70	Tilt Reset		

		71-75	Plate 1 Invert Off
		76-80	Plate 1 Invert On
		81-85	Plate 2 Invert Off
		86-90	Plate 2 Invert On
		91-95	Beam 1 Invert Off
		96-100	Beam 1 Invert On
		101-105	Beam 2 Invert Off
		106-110	Beam 2 Invert On
		111-115	Plate Swap On
		116-120	Plate Swap Off
		121-125	Beam Swap On
		126-130	Beam Swap Off
		131-140	Screen Always On
		141-150	Screen Off After 10s
		151-155	Screen Off After 60s
		156-160	Factory Data Reset
		161-170	W-DMX On
		171-175	W-DMX Off
		176-255	No Function
26	Plate Pixel 1 Red	0-255	Plate Pixel 1 Red Dimmer
27	Plate Pixel 1 Green	0-255	Plate Pixel 1 Green Dimmer
28	Plate Pixel 1 Blue	0-255	Plate Pixel 1 Blue Dimmer
...	...	...	...
65	Plate Pixel 14 Red	0-255	Plate Pixel 14 Red Dimmer
66	Plate Pixel 14 Green	0-255	Plate Pixel 14 Green Dimmer
67	Plate Pixel 14 Blue	0-255	Plate Pixel 14 Blue Dimmer
68	Beam Pixel 1	0-255	Beam Pixel 1 Dimmer
69	Beam Pixel 2	0-255	Beam Pixel 2 Dimmer

70	Beam Pixel 3	0-255	Beam Pixel 3 Dimmer
...	...	...	...
95	Beam Pixel 28	0-255	Beam Pixel 28 Dimmer

## 12. Control menu

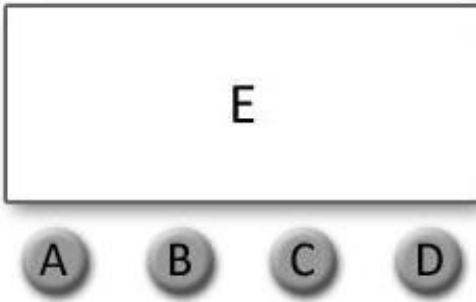

- A. MENU
- B. UP
- C. DOWN
- D. CONFIRM
- E. DIGITAL DISPLAY WINDOW

### Display:

- MENU** To select the programming functions (**press to unlock screen**)
- DOWN** To go backward in the selected functions
- UP** To go forward in the selected functions
- ENTER** To confirm the selected functions

### Set DMX Address:

1. Press "**MENU**" to unlock screen, then select the "**DMX Address**" and press "**ENTER**".
2. Showing "**Set DMX Address 001**", Press the "**UP** or **DOWN**" key to increase or decrease the DMX address value.
3. Press "**ENTER**" to save and Exit, Press "**Cancel**" does not save and Exit.

Level 1	Level 2	Description
<b>DMX Address</b>	001-512	Set DMX address
<b>DMX Channel Mode</b>	8CH	8 channels DMX mode
	18CH	18 channels DMX mode
	25CH	25 channels DMX mode
	95CH	95 channels DMX mode
	C 8CH	Compatible with Color STRIKE M channels
	C 11CH	
	C 13CH	
	C 24CH	
	C 30CH	
	C 47CH	
	C 68CH	
	C 74CH	
C 97CH		
<b>Dimmer Mode</b>	DIM1	
	DIM2	Dimmer mode 2
	DIM3	Dimmer mode 3
<b>Mode Selection</b>	DMX512	DMX mode
	Manual	R/G/B/W/Y (RGB, White dimming and Tilt manual control)
	Auto	Auto 1 / Auto 2 / Auto 3
<b>Mode Selection</b>	Set IP address	002.000.000.000
	Set subnet mask	255.000.000.000
	Set the Universe	000~255
<b>Settings</b>	Display Sleep	Open / 10s / 20s / 30s
	Button Lock	On / Off
	Language	English / 语言
<b>System Info</b>	Temperature	Light temperature
	RDM UID	RDM UID
	Version	Software Version

## 13. Specification

### **Strobe Panel LEDs**

LED Type: 1.5W RGB 3in1 LEDs

LED Count: 504

LED Colors: RGB

LED Segments: 14 (2 x 7)

### **Strobe Tube LEDs**

LED Type: 5W 6500K LEDs

LED Count: 280

LED Colors: Cool-White

LED Segments: 28 (2 x 14)

### **Movement**

Resolution: 8-16 Bit

Tilt (Degrees): 185°

### **Control**

Control Modes: 8CH / 18CH / 25CH / 95CH / C 8CH /

C 11CH / C 13CH / C 24CH / C 30 CH / C 47CH / C 68CH/

C 74CH / C 97CH

Display: Illuminated graphic LCD Touch Screen

Protocol: USITT DMX-512, RDM, Art-Net, sACN

RDM: Bidirectional communication

Wireless DMX: 2.4 GHz W-DMX™ (optional)

Cooling: Temperature controlled, overheating protection

### **Effects**

Dimmer: 0-100% electronic

Shutter: electronic, max. 20 Hz

Internal Effects: LED Macro Effects



## **Connectors**

Signal connection: Seetronic IP65 XLR 5-Pin or 3-Pin In/Out

Power Input: Seetronic PowerCON TRUE1 In

Art-Net: RJ45 In/Out

## **Operating Conditions**

Mains voltage: 100-240V AC / 50-60Hz

Power: 1800W

Maximum ambient temperature: -30°C / 86°F, 50°C / 122°F

Operating Position: any

## **Mounting Options**

Hanging: Omega-Bracket (Support arm side hanging)

Safety wire attachment: foldout eyelets

Folding clamps (optional)

## **Shipping**

Single fixture: cardboard

Tourpack: 4-way Flight Case

## **Housing Colors**

Standard colors: black

## **Dimensions**

Length: 482 mm / 18.9 in

Width: 178 mm / 9.0 in

Height (head horizontal): 243 mm / 9.5 in

## **Weight**

N.W: 13.0 kg    G.W: 16.0 kg

## **Size**

56x43x25cm